


12" BOX FAN

PARTS IDENTIFICATION

A	SPEED STAGE SWITCH
B	LOUVER SWITCH
C	TIME SWITCH
D	FAN BLADE
E	LOUVER
F	FRONT CABINET
G	HOLDER

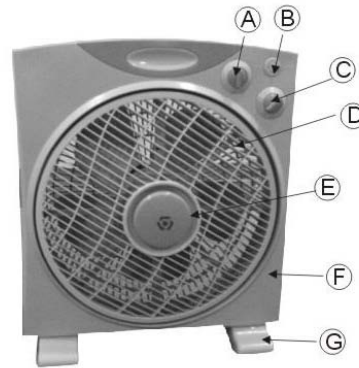

Only applicable for model with timer.

CAUTION

1. Do not plug line cord into outlet until fan has been completely assembled.
2. Use only with rated voltage.
3. During operation, do not put your hands or any other objects inside the grille.
4. Do not attempt to force the louver to turn.

SPEED CONTROL

To turn on the fan, simply turn to any of the SPEED STAGE SWITCH.

(1-2-3). To turn it off, turn to the "0" stage.

LOUVER CONTROL

Press the LOUVER SWITCH for 0 or 1.

60 MINUTES TIMER

The fan stops automatically at the set time.

At "0" position the fan will not operate even if you switch it on.

So, keep the indicator at "1" position.

CLEANING

To clean the louver, first turn the louver cap to the left and remove it.

Then remove the louver.

MAINTENANCE

1. Keep this unit in a cool and dry place.
2. Keep the fan clean. Use a piece of soft cloth soaked with soap water to clean off the dust and stains, wipe dry to keep in a fresh appearance. Must not attempt to use solvents like thinner, gasoline, etc.
3. After the fan is clean pack it into a vinyl bag and store it in a dry place.

Note:*Only applicable for model with timer. Above specifications are subject to change without notice.

21x14 CM